

## ZIG-AX AUDIO EXTENDER

### Features

- Extend audio signals up to 985 Ft / 300 meter away by using the Audio Extender and a single CAT5 cable.
- Unparalleled sound clarity and quality.

### Specifications

Function	ZIG-AX-RX	ZIG-AX-TX
Audio Out/In Connector	1 set RCA Female Connectors	
RJ-45 Connector	1	
Frequency response	10 Hz to 25 KHz /-3dB (1Vp-p/10k Ohms)	
Audio In impedance	10k Ohms	
MAX. Audio Input level	1.8Vp-p	
Cable Distance	985 Ft / 300 M (Max.)	
Power Adapter (Min.)	DC 12V	
Housing	Metal	
Weight	65 g	66 g
Dimensions (LxWxH) mm	92x34x22	



**(Local)**



**(Remote)**

**(ZIG-AX)**

## USER MANUAL

### Package Contents-

- Audio Extender Local Unit
- Audio Extender Remote Unit
- 1 user manual
- 1 power adapter DC 12V

### LOCAL FRONT VIEW



1. Power jack (DC 12V)
2. CAT.5 (RJ-45 Connector)

### LOCAL REAR VIEW



1. Audio In

### REMOTE FRONT VIEW



1. Power LED
2. CAT.5 (RJ-45 Connector)

### REMOTE REAR VIEW




1. Audio Out

# Installation

1. Be sure to turn off audio source.
2. Connect ZIG-AX (RX) Audio IN with RCA Audio cable from source.
3. Connect the ZIG-AX (RX) & (TX) Unit with CAT.5 cable.
4. Connect remote receiver / amp into ZIG-AX (TX) Remote Unit with RCA cable.
5. Connect the transformer power cord and power on audio source.

# Wiring Information & Coding

Conductor Identification	RJ45 Pin Assignment	Color Code for Conductor
Pair 1	5	White-Blue
	4	Blue
Pair 2	1	White-Orange
	2	Orange
Pair 3	3	White-Green
	6	Green
Pair 4	7	White-Brown
	8	Brown

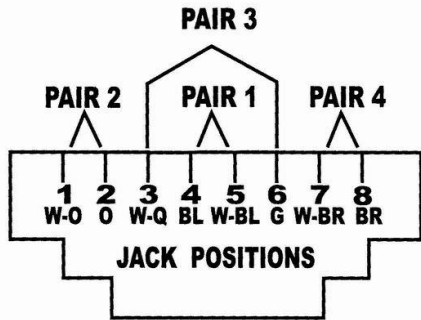

# ZIGEN

### Trademarks:

All the companies, brand names, and product names referred to this manual are the trademarks or registered trademarks belonging to their respective companies.